


INVICTA
Movement Caliber
NH38

Movement Caliber : NH38
Presentation

Display Elements


Minute Hand

Hour Hand

24-hour Hand

Second Hand

Date

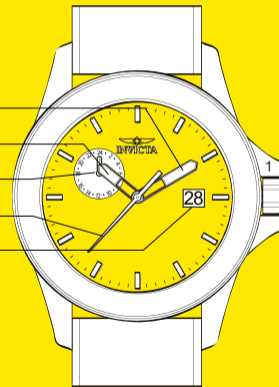

Crown Positions:

1. Normal position
2. Setting of hour, minute

Movement Caliber : NH38

Setting

Setting the Time

- 1.1 Pull the crown to position 3.
- 1.2 Turn the crown to set hour/ minute hands to the desired time.
- 1.3 Push the crown back to position 1.

Please note:

Check that AM/PM is set correctly



Movement Caliber : SH38

Setting

To wind up the Mainspring

Manual Winding

- Rotate the crown clockwise at normal position.
- Wind turning the ratchet wheel screw 8 times. It will start to move naturally after shaking slightly.

Wind up by machine

- Full wind up conditions
Rotary speed: 30 rpm
Operating time: 60 rpm

