


Function : Hour, Minute, Second, 24 Hours, Day & Date

PRESENTATION

Display Elements

- Minute Hand
- 24 Hours
- Hour Hand
- Day (Retrograde)
- Small Second
- Date

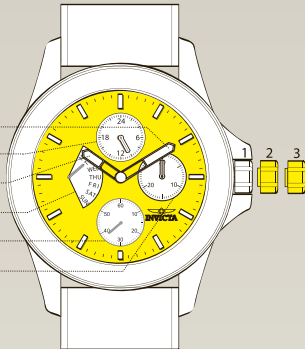

Control Buttons

- Crown Positions:
1. Normal position
 2. Setting of hour, minute
 3. Setting of date & day

INSTRUCTIONS MANUAL VD84

SETTINGS

Setting the Time

- 1.1 Pull out the crown to position 3 when the small second hand is at 12 o'clock position.
- 1.2 Advance the hour and minute hands by turning the crown clockwise. (Check that 24 hour hand is set correctly)
- 1.3 Push the crown back to position 1.

1.1



1.2



1.3




Setting the Day

- 2.1 Pull out the crown to position 2.
- 2.2 Turn the crown clockwise to set the day.
- 2.3 Push the crown back to position 1.

2.1



2.2

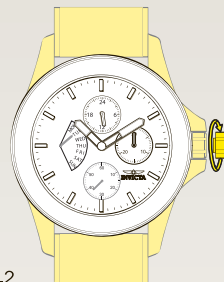

2.3



Quick Correct Retrograde Day

- 3.1 Pull out the crown to 3 position for day adjustment.
- 3.2 Turn the crown clockwise until the day advance by one increment.
- 3.3 Turn the crown counterclockwise until the center hands at or before 12:00 position.
- 3.4 Turn the crown clockwise again until the day advance by one increment.
- 3.5 By repeatedly perform the steps (3.3) & (3.4), the day hand can be adjusted to the desired position more quickly.

Setting the Date

- 4.1 Pull out the crown to position 2.
- 4.2 Turn the crown counter-clockwise to set the date.
- 4.2 Push the crown back to position 1.

3.1



3.2



3.3



Please note:

Do not set the date between 10:00PM and 1:00AM. Otherwise, the day may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside it, set the date and then reset the correct time.