



Function : Hour, Minute, Second, Date and Day

**PRESENTATION**

**Display Elements**

- Minute Hand
- Hour Hand
- Second Hand
- Day of the Week
- Date



**Control Buttons**

Crown

**INSTRUCTIONS  
MANUAL  
Cal.VX44**

**FEATURES**

- Hour, Minute and Second Hands
- Date
- Day of the week
- Timing of Day changes
  - \* The Day Hand moves to the next between 11:00pm and 12:00am
  - \* The Day Hand moves to the next between 2:00pm and 4:00am

**SETTINGS**

**How to Set Time**


- 1.1 Pull Crown out to the position 2 when the Second Hand is at 12 o'clock position.
- 1.2 Turn the Crown to set the time.
  - \* Note: When setting the Minute Hand, advance it 4 to 5 minutes ahead of the desired time then it back to the exact time.
- 1.3 Push Crown back to normal position. See the Second Hand begins to run.



1.1



1.2

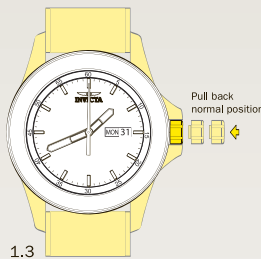

1.3

**How to Set Date and Day of the Week**

- 2.1 Pull crown out to the position 1.
- 2.2 Turn the Crown to the set date.
  - \* Note: Day of the week can be displayed either character by your choice. Between 9:00pm and 4:00am the date (day of the week) may not change on the following date (day of the week). This time period is not good for setting.
- 2.3 Push the Crown back to position.


\* Note: When date (day of the week) changes during daytime, it happens when AM/PM is wrongly set, Advance the Hour Hand by twelve hours.



2.1



2.2

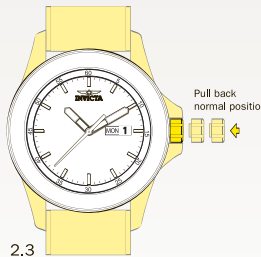

2.3

**INFO**

Battery: SR920SW

Battery Life Approx: 3 Years